

MULTI-BEAM[®]

3- & 4-wire Diffuse Mode Scanner Blocks for MULTI-BEAM[®] Modular Photoelectric Sensors




A Banner MULTI-BEAM Sensor is a compact *modular* self-contained photoelectric switch consisting of three components: a scanner block, a power block, and a logic module. The *scanner block*, described in this data sheet, comprises the housing for the sensor and contains a complete modulated photoelectric amplifier, the emitter and receiver optoelements and lenses, and space for the other modules.


The *power block module* provides the interface between the scanner block and the external circuit. It contains a power supply for the MULTI-BEAM plus a switching device to interface the sensor to the circuit to be controlled. 3- and 4-wire dc power block modules operate from dc voltages and are discussed in data sheet 03499. 3- and 4-wire ac power blocks operate from ac voltages and are covered in data sheet 03501. The *logic module* (data sheet 03304) interconnects the power block and scanner block both electrically and mechanically. It provides the desired timing logic function (if any) plus the ability to program the output for either light- or dark-operate.

Power block and logic modules are purchased separately. This modular design, with field-replaceable power block and logic modules, permits a large variety of sensor configurations, resulting in exactly the right sensor for any diffuse mode photoelectric application.

MULTI-BEAM 3- and 4-wire diffuse mode scanner blocks offer four different models. The high power model (those with 10 millisecond response time) offer the greatest optical sensing power of any industrial diffuse mode sensor.

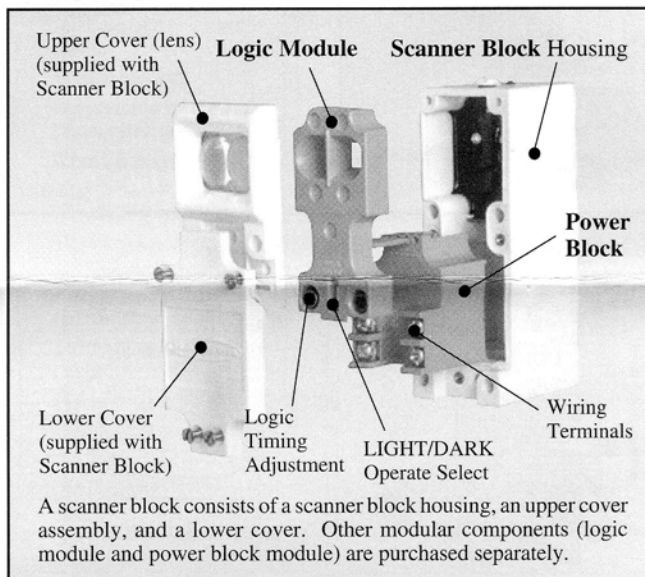


Dimensions

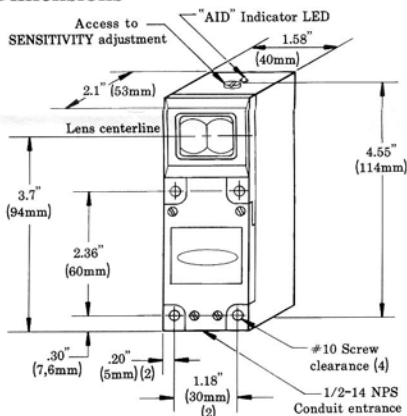

The circuitry of all MULTI-BEAM components is encapsulated within rugged, corrosion-resistant VALOX[®] housings that meet or exceed NEMA 1, 3, 12, and 13 ratings. MULTI-BEAM 3- and 4-wire diffuse mode scanner blocks include Banner's exclusive, patented* Alignment Indicating Device (AID[™]) system, which lights a top-mounted LED when the sensor sees its modulated light source and pulses at a rate proportional to the strength of the received light signal.

Functional Schematic

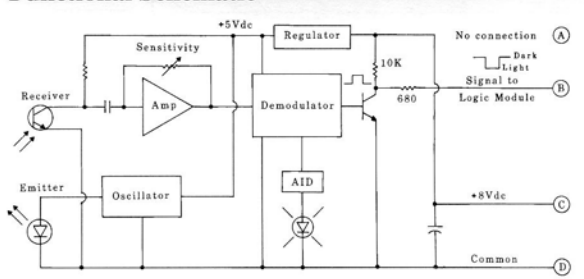

All MULTI-BEAM scanner blocks are totally solid-state for unlimited life.

*US patent 4356393.

Specifications (see also "Modifications", page 2)

Supply Voltage: Input power and output connections are made via 3- or 4-wire power blocks. See data sheet 03499 (DC Power Blocks) or 03501 (AC Power Blocks), or refer to the Banner product catalog.

Response Time: 1 millisecond "on" and "off"; high-gain models ("X" model suffix) 10 milliseconds "on" and "off"; independent of signal strength.

Repeatability of Response: 0.3 milliseconds (1.5 milliseconds for "X" models); independent of signal strength.

Sensitivity Adjustment: Easily-accessible, located on top of scanner block beneath o-ring gasketed nylon screw cover. 15-turn clutched control; rotate clockwise to increase sensitivity.

Alignment Indicator: Red LED on top of scanner block. Banner's exclusive, patented Alignment Indicating Device (AID[™]) circuit lights the LED whenever the sensor detects its own modulated light source, and pulses the LED at a rate proportional to the received light level.

Construction: Reinforced VALOX[®] housing; components totally encapsulated. Stainless steel hardware. Meets NEMA standards 1, 3, 12, and 13.


Operating Temperature Range: -40 to +70° C (-40 to +158° F).




WARNING These photoelectric presence sensors do NOT include the self-checking redundant circuitry necessary to allow their use in personnel safety applications. A sensor failure or malfunction can result in either an energized or a de-energized sensor output condition.

Never use these products as sensing devices for personnel protection. Their use as safety devices may create an unsafe condition which could lead to serious injury or death.

Only MACHINE-GUARD and PERIMETER-GUARD Systems, and other systems so designated, are designed to meet OSHA and ANSI machine safety standards for point-of-operation guarding devices. No other Banner sensors or controls are designed to meet these standards, and they must NOT be used as sensing devices for personnel protection.

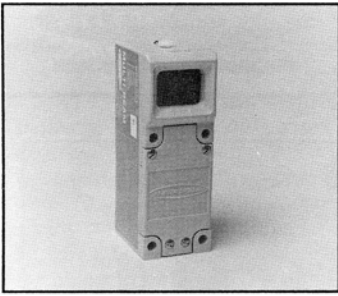





DIFFUSE MODE Scanner Blocks

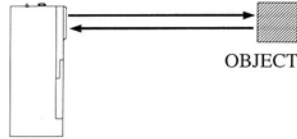

Diffuse mode MULTI-BEAMS combine emitter and receiver into one unit. Some of the emitted light, which is directed toward the object being sensed, returns to the receiver. Diffuse mode sensing is useful for presence sensing applications such as web break detection, ejected part detection, jam detection, open flap detection, and fill level detection of loosely packed products. Care must be taken to avoid sensing background objects: always verify that the distance to the nearest background object is at least three times the distance from the sensor to the object to be sensed. For example, if a product passes one inch from a diffuse sensor, the nearest background object should be at least three inches further away.

SHORT RANGE, FAST RESPONSE

INTERMEDIATE RANGE, FAST RESPONSE

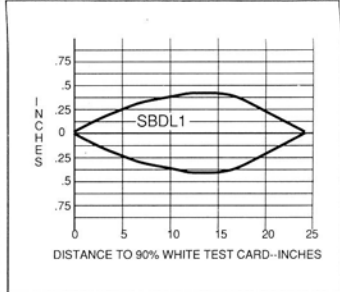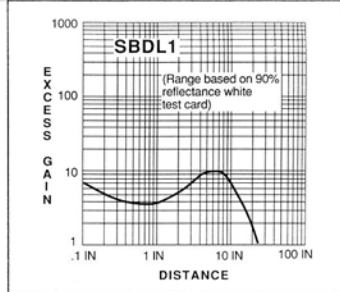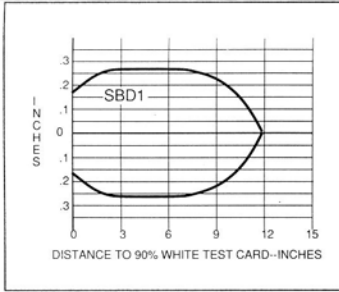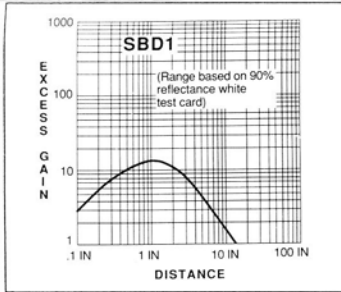

Model SBD1
Range: 12 inches (30cm)
Response: 1ms on/off
Beam: infrared, 940nm





SBD1: short range diffuse mode sensor with relatively wide field of view. Loses gain rapidly near the end of its range. As a result, its response to background objects is suppressed. However, use caution when applying any diffuse mode sensor if background reflectivity exceeds the reflectivity of the object to be sensed.

Model SBDL1
Range: 24 inches (60cm)
Response: 1ms on/off
Beam: infrared, 940nm

SBDL1: longer range than SBD1, but with less response to objects passing the sensor at close range, and greater sensitivity to background objects. Models SBD1 and SBDL1 are identical except for their upper cover (lens) assembly (SBD1 uses UC-D; SBDL1 uses UC-L).

LONG RANGE; FOR LOW-REFLECTIVITY OBJECTS

WIDE BEAM ANGLE FOR CLEAR OBJECTS

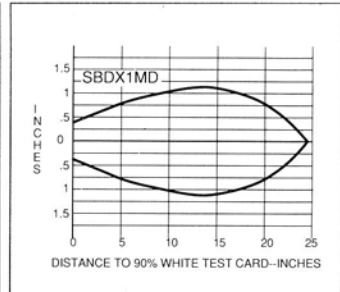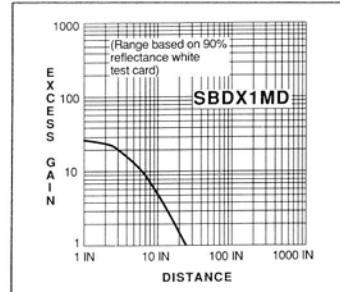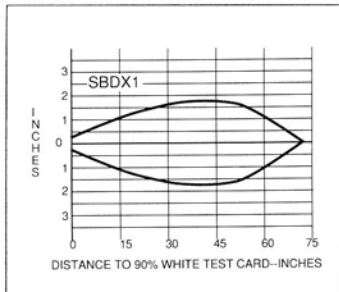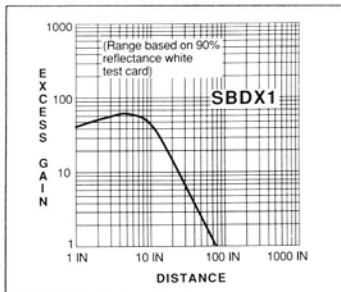

Model SBDX1
Range: 6 feet (2m)
Response: 10ms on/off
Beam: infrared, 880nm

SBDX1: first choice for diffuse (proximity) mode applications when there is no requirement for less than 10 ms response and where there are no background objects to falsely return light. High excess gain for reliable detection of most materials with low reflectivity which pass within 10 inches (25cm) of the sensor.

Model SBDX1MD
Range: 24 inches (60cm)
Response: 10ms on/off
Beam: infrared, 880nm

SBDX1MD: wide beam angle for forgiving alignment to shiny objects. First choice for detection of clear or translucent glass or plastics. High excess gain at close range, with fast fall-off of gain near the maximum sensing distance for optical suppression of reflective background. This model may be created from model SBDX1 by substituting upper cover (lens) model UC-DMB.

MULTI-BEAM Scanner Block Modifications

The following are popular modifications to MULTI-BEAM 3- & 4-wire scanner blocks. They are not stocked, but are available on a quote basis.

HIGH SPEED MODIFICATION "MHS": SBD1 and SBDL1 scanner blocks, which have 1 millisecond response, may be modified for 300 microsecond (0.3 millisecond) response. This modification is designated by adding suffix "MHS" to the scanner block model number (e.g.-SBD1MHS, etc.). The MHS modification reduces the available excess gain by about 50%, and also decreases the sensor's immunity to some forms of electrical "noise".

ZERO HYSTERESIS MODIFICATION "MZ": amplifier hysteresis may be removed from 3- and 4-wire scanner blocks when attempting to sense very small signal changes (contrasts less than 3). This modification is designated by adding suffix "MZ" (Modified Zero Hysteresis). Be sure that all variables affecting the sensor's optical response remain constant before ordering the zero hysteresis modification.

INSTALLATION AND ALIGNMENT


Diffuse mode photoelectric sensing is useful for presence sensing of almost any reflective object or material, and is the first choice for sensing transparent or translucent materials when the distance from the sensor to the material is not fixed. A common example of this latter type of application is clear web-break detection when web flutter is uncontrolled.

Ranges for diffuse sensors are always specified using a white test card. Objects with less reflectivity produce shorter sensing ranges or less excess gain at a given range (see table at right). *Size* may also be important: given two objects of the same reflectivity, a large object may return more light to the sensor than does a smaller object.

Successful diffuse mode sensing depends upon adequate optical contrast between the object being sensed and the background behind the object. This means that the greater the difference between light reflected from the object and light reflected from the background, the more reliable diffuse mode sensing will be.

Most problems in diffuse mode sensing arise because of backgrounds which return as much, or nearly as much, light to the sensor as does the object to be sensed. In general, this problem is solved by using as dark a background as possible and by placing the background as far behind the object as possible. There is a general rule which states that the object-to-background distance should be *at least three times* the sensor-to-object distance.

Minimum distance to background - diffuse mode sensors

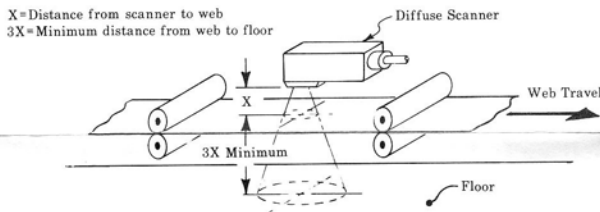

Shiny materials usually require close control of the scanning angle to maximize the amount of reflected light actually returned to the sensor. The sensor should be mounted so that the sensing beam is exactly perpendicular to the object's surface.

Proper operation of diffuse mode sensors requires that they be mounted securely and aligned properly. Excessive movement or vibration could result in intermittent or false operation caused by loss of alignment to the object being sensed. Banner offers a variety of 2- and 3-axis mounting brackets for use with MULTI-BEAM sensors. See the Banner product catalog for bracket information.

NOTE: The Alignment Indicating Device (AID) system LED on the top of the sensor is used in the following alignment procedure:

1) Begin with the sensor at the desired distance from the object and at the approximate position where it will be mounted. The background (behind the object to be detected) should be as far behind the object as possible, and of as dark a color as possible compared to the object to be detected. Ideally, the object should present its largest reflective surface to the sensor.

2) Apply power to the MULTI-BEAM power block (terminals #1 and #2; observe polarity on DC models). With the object to be detected in place, adjust the position of the MULTI-BEAM relative to the object to produce the fastest LED alignment indicator pulse rate. If the LED appears to be "on" steadily, it is actually pulsing at a rate too fast to be seen. Slow the pulsing to a "countable" rate by reducing the sensitivity (counterclockwise rotation of the adjustment). Being able to detect a change in the pulse rate when the sensor's position is changed will allow accurate alignment.

(continued on next page)

Relative Reflectivity Table

MATERIAL	REFLECTIVITY (%)	EXCESS GAIN REQUIRED
Kodak white test card	90%	1
White paper	80%	1.1
Newspaper (with print)	55%	1.6
Tissue paper: 2 ply	47%	1.9
1 ply	35%	2.6
Masking tape	75%	1.2
Kraft paper, cardboard	70%	1.3
Dimension lumber (pine, dry, clean)	75%	1.2
Rough wood pallet (clean)	20%	4.5
Beer foam	70%	1.3
*Clear plastic bottle	40%	2.3
*Translucent (brown) plastic bottle	60%	1.5
*Opaque white plastic	87%	1.0
*Opaque black plastic (nylon)	14%	6.4
Black neoprene	4%	22.5
Black foam carpet backing	2%	45
Black rubber tire wall	1.5%	60
*Natural aluminum, unfinished	140%	0.6
*Natural aluminum, straightlined	105%	0.9
*Black anodized aluminum, unfinished	115%	0.8
*Black anodized aluminum, straightlined	50%	1.8
*Stainless steel, microfinish	400%	0.2
*Stainless steel, brushed	120%	0.8

*Note: For materials with shiny or glossy surfaces, the reflectivity figure represents the maximum light return, with the scanner beam exactly perpendicular to the material surface.

About Banner's Alignment Indicating Device (AID™) System:

"AID" (Alignment Indicating Device, US patent #4356393) is an exclusive built-in feature that permits optimum alignment and continuous monitoring of the photoelectric system. The red receiver LED indicator is "on" when the receiver "sees" the modulated light from the emitter LED and "off" when the beam is broken. In addition, a low frequency pulse rate is superimposed on the LED indicator. When alignment is marginal, the pulse rate will be about once per second (indicating an excess gain of 1). As alignment is improved, the pulse rate increases, indicating increased excess gain. Optimum sensor alignment is indicated by the fastest pulse rate.

The AID feature will also tell you when maintenance is necessary. Any pulse rate less than two per second indicates marginal performance; the unit, however, is still *functioning* properly. When the pulse rate slows to less than 2 per second, lenses should be cleaned and alignment checked.

3) Turn the sensor's SENSITIVITY control to the fully clockwise position. (This is a 15-turn control, clutched at both ends.)

4) Remove the object from the sensing position. If the alignment indicator LED goes "off", check operation by alternately placing the object in position and removing it. The LED should follow the action by coming "on" when the object is present and going "off" when the object is removed. If this occurs, alignment is complete. NOTE: a steady "on" condition of the LED with the object present is the best situation, but this may not always be possible to achieve, especially if the object to be detected is of low reflectivity.

5) If the alignment indicator stays "on" when the object is removed, the MULTI-BEAM is receiving false light returned from a background surface. Reduce the sensitivity (counterclockwise rotation of the adjustment) until the alignment indicator LED goes "off", plus two more full turns. Place the object in position and check that the alignment indicator LED comes "on". (Repeat step #4, above.)

NOTE: If, in step #5, the LED does not come "on" when the object is placed in position, the sensor is receiving *as much or more light energy from the background* as from the object. In this situation, consider the following alternatives:

- a) Move the sensor closer to the object and reduce the sensitivity (not possible with model SBDL1 - see excess gain curve),
- b) Reduce background reflectivity by painting the background with a flat black paint, cutting a hole through it, scuffing it's surface, etc.,
- c) If the background surface is shiny, tilt the sensor (or the background surface) in any direction so that the beam is not perpendicular to the background surface,
- d) Evaluate other sensing methods, such as convergent beam or ultrasonic proximity sensing.

6) Secure the MULTI-BEAM in position and complete the wiring by connecting the load to the output circuit of the power block (terminal #3 and/or #4). Refer to the hookup information for the power block in use. Check operation of the load by alternately placing an object in front of the lens and then removing it. Adjust the logic module timing (if any), as required.

NOTE: Logic modules (except models LM1, LM2, and LM10) include a light/dark operate programming jumper. Removing the jumper will invert the output state of the power block (from normally open to normally closed or vice versa). *Caution: do not attempt to remove the programming jumper while power is applied to the MULTI-BEAM!*

TROUBLESHOOTING TABLE

SYMPTOM	PROBABLE CAUSE	CORRECTION
Alignment indicator never comes "on", and output never switches the load.	Sensitivity is too low.	Turn sensitivity control clockwise to increase gain. Follow alignment procedure.
	Object to be sensed is outside the MULTI-BEAM's field of view. Loose connection.	Check power supply at power block terminals #1 and #2.
	Failure of a sensor component.	Test MULTI-BEAM using Banner model LMT. Replace failed module.
Alignment indicator never comes "on", but load is switched correctly.	Broken alignment indicator LED (sensor will continue to operate).	Replace scanner block (if alignment indicator is required).
Alignment indicator is always "on", and output never switches.	False light returned by background object.	Turn sensitivity control counterclockwise to decrease gain. Angle the sensor if background is shiny. Use model with a shorter focus range.
	Optical crosstalk from broken lens.	Turn sensitivity control counterclockwise to decrease gain. Angle the sensor if background is shiny. Use model with a shorter sensing range.
	Failure of sensor component.	Test MULTI-BEAM using Banner model LMT. Replace failed module.
Alignment indicator follows the sensing action, normally, but the output is energized all of the time.	Output of power block failed (shorted).	Replace power block module. Check load demand against power block switch rating.
Alignment indicator follows the sensing action, normally, but the output never energizes.	Failure of logic module or power block.	Test MULTI-BEAM using Banner model LMT. Replace failed module.
	Loose connection.	Check wires to load.
Sensitivity cannot be set to sense the difference between the light and dark conditions. The sensitivity is either too high or too low.	Low optical contrast (less than 2:1).	Re-position the MULTI-BEAM and follow alignment procedure. Increase difference in reflectivity between the light and dark conditions (e.g.-drill hole through background). Evaluate alternative sensing methods.

WARRANTY: Banner Engineering Corporation warrants its products to be free of defects for a period of one year. Banner Engineering Corporation will repair or replace, free of charge, any product of its manufacture found to be defective at the time it is returned to the factory during the warranty period. This warranty does not cover damage or liability for the improper application of Banner products. This warranty is in lieu of any other warranty either expressed or implied.