

HMI Base Module


The HMI base module is used to install the HMI module when using the slim type CPU module. The HMI base module also has a port 2 connector to attach an optional RS232C or RS485 communication adapter.

When using the all-in-one type CPU module, the HMI base module is not needed to install the HMI module.

HMI Base Module Type Number

Module Name	Type No.
HMI Base Module	FC4A-HPH1

Parts Description

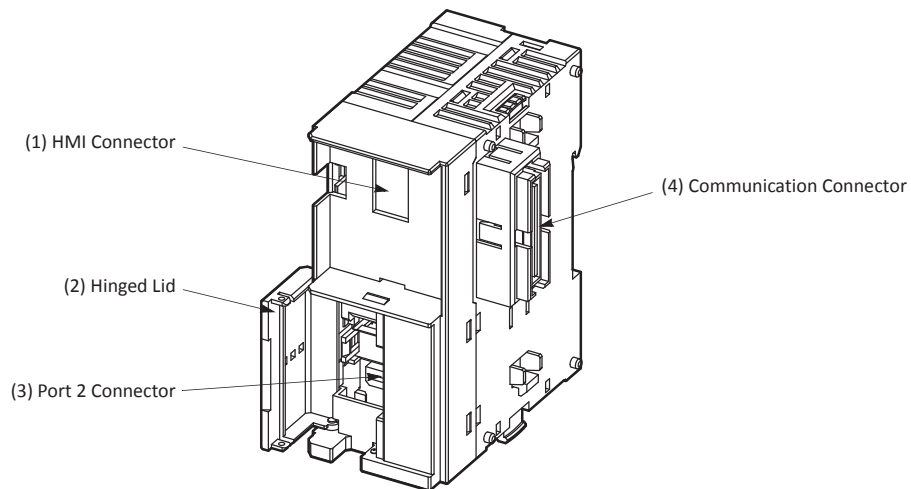

- | | |
|------------------------------------|---|
| (1) HMI Connector | For installing the HMI module. |
| (2) Hinged Lid | Open the lid to gain access to the port 2 connector. |
| (3) Port 2 Connector | For installing an optional RS232C or RS485 communication adapter. |
| (4) Communication Connector | Connects to the slim type CPU module. |