## Non-illuminated Round Pushbuttons (Assembled)



IDEC

			Round Flush		Round Extended	
	Function	Contacts	Plastic Bezel	Metal Bezel	Plastic Bezel	Metal Bezel
	Momentary	Operator Only	<i>HW1B-M1-</i> ①	<i>HW4B-M1-</i> ①	<i>HW1B-M2</i> -①	<i>HW4B-M2-</i> ①
		1N0	HW1B-M1F10-1	HW4B-M1F10-①	HW1B-M2F10-1	HW4B-M2F10-①
		1NC	HW1B-M1F01-®	HW4B-M1F01-1	HW1B-M2F01-1	HW4B-M2F01-①
		1NO-1NC	HW1B-M1F11-®	HW4B-M1F11-①	HW1B-M2F11-①	HW4B-M2F11-①
		2N0	HW1B-M1F20-®	HW4B-M1F20-①	HW1B-M2F20-1	HW4B-M2F20-①
		2NC	HW1B-M1F02-®	HW4B-M1F02-①	HW1B-M2F02-1	HW4B-M2F02-①
		2NO-2NC	HW1B-M1F22-®	HW4B-M1F22-1	HW1B-M2F22-①	HW4B-M2F22-①
	Maintained	Operator Only	<i>HW1B-A1-</i> ①	<i>HW4B-A1-</i> ①	<i>HW1B-A2-</i> ①	<i>HW4B-A2-</i> ①
		1N0	HW1B-A1F10-①	HW4B-A1F10-①	HW1B-A2F10-①	HW4B-A2F10-①
		1NC	HW1B-A1F01-①	HW4B-A1F01-①	HW1B-A2F01-①	HW4B-A2F01-①
		1NO-1NC	HW1B-A1F11-①	HW4B-A1F11-①	HW1B-A2F11-①	HW4B-A2F11-①
		2N0	HW1B-A1F20-1	HW4B-A1F20-1	HW1B-A2F20-①	HW4B-A2F20-①
		2NC	HW1B-A1F02-1	HW4B-A1F02-①	HW1B-A2F02-①	HW4B-A2F02-①
		2NO-2NC	HW1B-A1F22-①	HW4B-A1F22-①	HW1B-A2F22-①	HW4B-A2F22-①

## ① Button Color Code



- A
- In place of ①, specify the Button Color Code from table below.
  For nameplates and accessories, see page 546 and 549.
  - 3. For dimensions, see page 551.
  - 4. For contact assembly part numbers, see page 550.
  - 5. All assembled part numbers in catalog include standard, fingersafe (HW-F...) contacts.
  - Assembled units with spring-up terminals (HW-G...) can be ordered by removing an "F" from the part number (Ex. HW1B-M1F11-R becomes HW1B-M111-R).
  - 7. Operator only models include operator plus button.
  - 8. Additional contact configurations available (up to 6 total contacts).

**Terminal Blocks** 

## IDEC

Switches & Pilot Lights

**Display Lights** 

Relays & Sockets

Timers

**Terminal Blocks** 

**Circuit Breakers** 



Part Number Structure