

more sensors, more solutions

D10 Expert -- with Discrete Output and Bargraph Display

Advanced sensor for use with plastic fiber optics



Features

- Easy-to-read 8-segment light bar indicator for teach and signal strength readout, plus indicators for continuous readout of operating status (user configuration)
- Easy-to-set automatic *Expert*-style configuration options include Static and Dynamic TEACH, and Window SET, plus manual adjustment for fine tuning
- · Smart gain-control algorithm to maximize performance in low-contrast applications
- Fast 500-microsecond sensing response with improved crosstalk avoidance routine (for two sensors) in Normal mode
- Selectable high-speed (HS) mode option for 200-microsecond response
- Extreme configuration flexibility via push buttons or a remote input wire
- Easy selection of Light/Dark Operate (LO/DO), 30 ms pulse stretcher (OFF-delay), and response speed, via push buttons or a remote input wire
- Visible red (660 nm) or visible green (525 nm) sensing beam, depending on model
- Sleek, ultra-slim 10 mm housing, mounts to standard 35 mm DIN rail
- PowerBUS models with improved temperature compensation available for side-byside mounting and simplified wiring of up to 16 sensors

[†] U.S. Patent(s) issued or pending

Models

Model		Description	Cable*	Outrasta	
Red Beam	Green Beam	Description	Cable	Outputs	
D10BFP	D10BFPG	Standard sensor	2 m (6.5') Cable		
D10BFPQ	D10BFPGQ	Standard Sensor	6-pin Pico-style QD	Bipolar NPN/PNP	
PowerBUS Models					
D10B5FP	-	PowerBUS main unit	2 m (6.5') Cable	Bipolar NPN/PNP	
D10B2PFP	_	PowerBUS sub-unit	2 m (6.5') Cable	Single PNP	
D10B2NFP	_		2 m (6.5') Cable	Single NPN	

* 9 m (30') cables are available by adding suffix **"W/30"** to the model number of any cabled sensor (e.g., **D10BFP W/30**). A model with a QD connector requires a mating cordset (see page 11).

NOTE: See page 9 for performance curves.

MARNING . . . Not To Be Used for Personnel Protection

Never use these products as sensing devices for personnel protection. Doing so could lead to serious injury or death.

These sensors do NOT include the self-checking redundant circuitry necessary to allow their use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition. Consult your current Banner Safety Products catalog for safety products which meet OSHA, ANSI and IEC standards for personnel protection.



02/08

Overview

The D10 *Expert* is an easy-to-use, DIN-rail-mountable fiber optic sensor. It provides highperformance sensing in low-contrast applications. Configuration options include SETUP mode plus Static and Dynamic TEACH, and Window SET options, in addition to manual fine adjustment, remote programming, and security push button lockout.

The sensor's compact housing has a large, easy-to-see bargraph display plus bright LEDs for easy programming and status monitoring during operation.

Non-PowerBUS sensor models have bipolar outputs, one each NPN and PNP, as does the PowerBUS main unit. PowerBUS sub-units feature a single discrete output, either NPN or PNP.

PowerBUS models are designed for use in machines and other applications where multiple sensors will be grouped tightly. They feature increased temperature compensation compared with standard models and reduce the amount of wiring necessary for such applications. An accessory clamp is available to secure a bank of connected sensors together on a DIN rail (see page 11).

Sensor Configuration

Sensor configuration is accomplished via TEACH, SET, and SETUP modes. After the sensing parameters are defined (using either TEACH or SET mode), SETUP mode may be used to enable the delay, to change the light/dark operate status, or to select the high-speed response option (HS). Manual Adjust may be used to fine-tune the thresholds (see page 7). Two push buttons, Dynamic (+) and Static (-), or the remote wire, may be used to access and set the sensing parameters.

Sensor sensitivity may be configured using any of three methods. A single switching threshold may be achieved using either Dynamic (on-the-fly) or Static TEACH; or Window SET may be used to define a sensing window, centered on a single sensing condition.

Remote Configuration

The remote configuration function may be used to configure the sensor remotely or to disable the push buttons for security. Connect the gray wire of the sensor to ground (0V dc), with a remote programming switch connected between them. Pulse the remote line according to the diagrams in the configuration procedures. The duration of the individual pulses is equal to the value T:

$0.04 \text{ seconds} \le T \le 0.8 \text{ seconds}$

Returning to RUN Mode

Some TEACH, SET, and SETUP modes may be exited either after the 60-second timeout, or by exiting the process:

- In Static TEACH or Window SET mode, press and hold the Static (-) button (or hold the remote line) for 2 seconds. The sensor returns to RUN mode without saving any new settings.
- In SETUP mode, press and hold both the Static (-) and Dynamic (+) buttons (or hold the remote line) for 2 seconds. The sensor returns to RUN mode and saves the current setting.

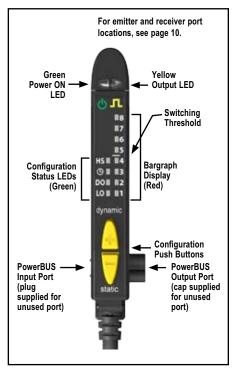


Figure 1. D10 Bargraph Model features

2 P/N 117830 rev. C

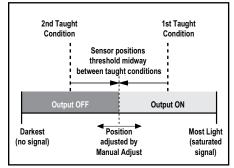


Figure 2. Static TEACH (Light Operate shown)

Bargraph LED Following TEACH	Relative Signal Difference/ Recommendation	
6 to 8	Excellent: Very stable operation.	
4 to 5 Good: Minor sensing variables wi not affect sensing reliability.		
2 to 3	Low: Minor sensing variables may affect sensing reliability.	
1	Unreliable: Consider an alternate sensing scheme.	

Static TEACH (Switchpoint)

- · Establishes a single switching threshold
- Threshold position is adjustable using "+" and "-" buttons (Manual Adjust)

Static TEACH is the traditional setup method, used when two conditions can be presented by the user. The sensor locates a single sensing threshold (the switchpoint) midway between the two taught conditions, with the Output ON condition on one side, and the Output OFF condition on the other (see Figure 2).

The first condition taught is the ON condition. The Output ON and OFF conditions can be reversed by changing Light/Dark Operate status in SETUP mode (see page 6).

Static TEACH and Manual Adjust

Using Manual Adjust with Static TEACH moves the switching threshold. The lighted LED on the bargraph will move to exhibit the received signal, relative to the switchpoint.

	Push Button 0.04 seconds ≤ "Click" ≤ 0.8 seconds	Remote Line 0.04 seconds ≤ T ≤ 0.8 seconds	Result
Access TEACH Mode	Press and hold Static button > 2 seconds.	No action required; sensor is ready for 1st TEACH condition.	Power LED: OFF Output LED: ON Status LEDs: LO & DO alternately flashing Bargraph: OFF
Learn Output ON Condition	Present Output ON condition. Click Static button.	 Present Output ON condition. Single-pulse remote line. 	Power LED: OFF Output LED: Flash, then OFF Status LEDs: LO & DO alternately flashing Bargraph: OFF
Learn Output OFF Condition	 Present Output OFF condition. Click Static button. 	 Present Output OFF condition. Single-pulse remote line. 	Teach Accepted Power LED: ON Bargraph: One LED flashes to show relative contrast (good signal difference shown; see table above) Sensor returns to Run mode.
Learr OFF C			Teach Unacceptable Power LED: OFF Bargraph: #1, 3, 5, 7 alternately flash to show failure Sensor returns to "Learn Output ON condition."

Dynamic TEACH and Adaptive Thresholds

- · Teach on-the-fly
- Establishes a single switching threshold
- Threshold position is adjustable using "+" and "-" buttons (Manual Adjust)


Dynamic TEACH is best used when a machine or process may not be stopped for teaching. It programs the sensor during actual sensing conditions, taking multiple samples of the light and dark conditions and automatically setting the threshold at the optimum level (see Figure 3).


Dynamic TEACH activates the sensor's adaptive threshold system, which continuously tracks minimum and maximum signal levels, and automatically maintains centering of the switchpoint between the light and dark conditions. The adaptive threshold system remains in effect during RUN mode. The adaptive routine saves to non-volatile memory at least once per hour.

When Dynamic TEACH mode is used, the output ON state (Light or Dark Operate) will remain as it was last programmed. To change the output ON state, use SETUP mode (see page 6).

Dynamic TEACH and Manual Adjust

The switchpoint may be adjusted (fine-tuned) whenever the sensor is in RUN mode by clicking the "+" and "-" buttons. However, when a manual adjustment is made, the adaptive threshold system is disabled (cancelled).

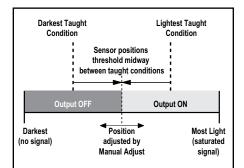



Bargraph LED Following TEACH	Relative Signal Difference/ Recommendation
6 to 8	Excellent: Very stable operation.
4 to 5	Good: Minor sensing variables will not affect sensing reliability.
2 to 3	Low: Minor sensing variables may affect sensing reliability.
1	Unreliable: Consider an alternate sensing scheme.

	Push Button	Remote Line	Result	
Access Dynamic TEACH Mode	Press and Hold Dynamic push button > 2 seconds.	Hold remote line low (to ground) > 2 seconds.	Power LED: OFF Output LED: OFF Bargraph: LO & DO alternately flashing	
TEACH Sensing Conditions	 Continue to hold push button. Present Output ON and OFF conditions. 	 Continue to hold remote line low (to ground). Present Output ON and OFF conditions. 	Power LED: OFF Output LED: OFF Bargraph: LO & DO alternately flashing	
Return to Run Mode	Release push button.	Release remote line/ switch.	Teach Accepted Power LED: ON Bargraph: One LED flashes to show relative contrast (good signal difference shown; see table above)	
to F			Sensor returns to Run mode with new settings.	
eturr	Return		Teach Unacceptable	
Ř			Power LED: OFF Bargraph: #1, 3, 5, 7 alternately flash to show failure	
			Sensor returns to Run mode without changing settings.	

Banner Engineering Corp. • Minneapolis, MN U.S.A • www.bannerengineering.com • Tel: 763.544.3164

For Sales and Support, Contact Walker EMD • Toll-free: (800) 876-4444 • Tel: (203) 426-7700 • Fax: (203) 426-7800 • www.walkeremd.com

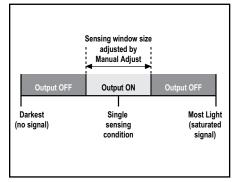


Figure 4. Window SET (Light Operate shown)

Window SET

- · Establishes a single ON condition
- All other conditions (lighter or darker) result in OFF output
- Sensing window size (sensitivity) is adjustable using "+" and "-" buttons (Manual Adjust)

Window SET is most useful when a product may not always appear in the same place, or when other signals may appear. Window SET designates a sensing window, with the Output ON condition inside the window, and the Output OFF conditions outside the window (see Figure 4). The sensor accepts a single sensing condition, and adds switching thresholds above and below that condition to create a sensing window. Output ON and OFF conditions can be reversed by changing Light/Dark Operate status in SETUP mode.

Window SET and Manual Adjust

Using Manual Adjust with Window SET expands or contracts the size of the window. The lighted LEDs on the light bar separate to a greater or lesser extent to exhibit the relative sensing window size.

	Push Button 0.04 seconds ≤ "Click" ≤ 0.8 seconds	Remote Line 0.04 seconds ≤ T ≤ 0.8 seconds	Result
Access SET Mode	Press and hold Static push button > 2 seconds.	 Present Output ON condition. Single-pulse remote line. 	Power LED: OFF Output LED: ON (Push Button) Output LED: OFF (Remote) Static LEDs: LO & DO alternately flashing
ON Condition	 Present Output ON condition. Double-click Static push button. 	Double-pulse remote line.	Window Accepted Power LED: ON Bargraph: 2 indicators flash together to show Window accepted Sensor returns to RUN mode with new settings.
Learn Output ON Condition	The second se		Window Unacceptable Power LED: OFF Bargraph: #1, 3, 5, 7 flash to show failure Sensor returns to "Learn Output ON Condition."

SETUP Mode

SETUP mode is used to change sensor output response for:

- Light or Dark operate
- · 30-millisecond pulse stretcher (OFF-delay), if required.
- 200 µs high-speed response

If SETUP mode configuration is interrupted and remains inactive for 60 seconds, the sensor returns to RUN mode with the most recent settings (i.e., exits and saves current selection).

SETUP mode operates in the "background," while the outputs are active; changes are updated instantly.

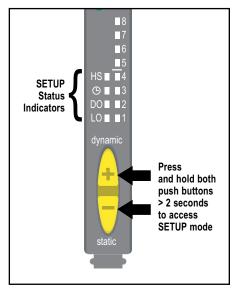


Figure 5. SETUP mode

	Push Button 0.04 seconds ≤ "Click" ≤ 0.8 seconds	Remote Line 0.04 seconds ≤ T ≤ 0.8 seconds	Result
Access SETUP Mode	Press and hold both push buttons > 2 seconds.	Double-pulse remote line.	 Green Power LED turns OFF. Output LED remains active. Icons continue to display current setup. Bargraph turns OFF.
Select Setting Combination	Click either push button until LEDs show desired settings. or	Pulse the remote line until LEDs show desired settings. T ••• T NOTE: Double-pulsing the remote line will cause the setting to "back up" one step.	Sensor toggles through eight setting combinations, in the following order: LO - Normal Speed - No Delay (default) DO - Normal Speed - No Delay LO - High Speed - No Delay DO - High Speed - No Delay LO - Normal Speed - Delay DO - Normal Speed - Delay LO - High Speed - Delay LO - High Speed - Delay DO - High Speed - Delay DO - High Speed - Delay
Return to RUN Mode	Press and hold both push buttons > 2 seconds.	Hold remote line low 2 seconds.	Green Power LED turns ON. Sensor returns to RUN mode with new settings.

Banner Engineering Corp. • Minneapolis, MN U.S.A www.bannerengineering.com • Tel: 763.544.3164

6 P/N 117830 rev. C

For Sales and Support, Contact Walker EMD • Toll-free: (800) 876-4444 • Tel: (203) 426-700 • Fax: (203) 426-7800 • www.walkeremd.com

Manual Adjust

Use during RUN mode, accomplished via push buttons only.

Static or Dynamic TEACH:

· Fine-tunes sensing sensitivity

• Press "+" to increase; press "-" to decrease

Window SET:

- Adjusts sensing window size (tolerance) for the single-point target condition
- Press "+" to increase; press "-" to decrease

The lighted bargraph LEDs move to reflect the increase or decrease.

Push Button Disable


In addition to its configuration function, the remote input may be used to disable the push buttons for security. Disabling the push buttons prevents undesired tampering with the configuration settings. Connect the gray wire of the sensor as described on page 2, and four-pulse to either enable or disable the push buttons:





Specifications				
	Standard Sensors PowerBUS Models			
Sensing Beam	660 nm visible red or 525 nm visible green, depending on model	660 nm visible red		
Supply Voltage	10 to 30V dc (10% max. ripple) @ less than 45 mA exclusive of load	12 to 30V dc (10% max. ripple) @ less than 45 mA exclusive of load		
Supply Protection Circuitry	Protected against reverse polarity, over voltage, and	I transient voltages		
Delay at Power Up	200 milliseconds max.; outputs do not conduct during this time	850 milliseconds max.; outputs do not conduct during this time		
Output Configuration	Bipolar; 1 current sourcing (PNP) and 1 current sinking (NPN)	Main units: Bipolar; 1 current sourcing (PNP) and 1 current sinking (NPN) Sub-units: 1 current sourcing (PNP) or 1 current sinking (NPN) output, depending on model		
Output Rating	150 mA max. load @ 25° C (derate 1 mA per °C increase) OFF-state leakage current: < 5 μA at 30V dc ON-state saturation voltage: NPN: < 200 mV @ 10 mA; 1V @ 150 mA load PNP: < 1V @ 10 mA; 1.5V @ 150 mA load	100 mA max. load (derate 1 mA per °C above 30° C) OFF-state leakage current: < 5 μA at 30V dc ON-state saturation voltage: NPN: < 1.5V PNP: < 2V Supply 15V or more: up to 16 units with 100 mA outputs Less than 15V supply (9 m cable): up to 4 units with 100 mA outputs up to 8 units with 50 mA outputs		
Output Protection	Protected against output short-circuit, continuous ov	erload, transient over-voltages, and false pulse on power up		
Output Response Time	500 microseconds (normal mode) or 200 microseconds (high-speed mode)			
Repeatability	100 microseconds (normal mode) or 66 microseconds (high-speed mode)			
Adjustments	 2 push buttons and remote wire <i>Expert</i>-style configuration (Static and Dynamic TEACH, and Window SET) Manually adjust (+/-) sensitivity (from push buttons only) LO/DO, OFF-delay, and response speed configurable (from push buttons or remote wire) Push button lockout (from remote wire only) Factory Default Settings: Light Operate, Normal Speed, No Delay 			
Indicators	 8-segment red bargraph: Light-to-dark signal difference relative to taught condition (Window SET) Sensing contrast (Static or Dynamic TEACH) Green Status Indicators: LO, DO, High Speed (HS), and OFF-Delay Green LED: Power ON Yellow LED: Output conducting 			
Construction	Black ABS/polycarbonate alloy (UL94 V-0 rated) housing, clear polycarbonate cover			
Environmental Rating	IEC IP50, NEMA 1			
Connections	PVC-jacketed 2 m or 9 m (6.5' or 30') 6-wire integral cable or integral 6-pin Pico-style quick- disconnect	Main units: PVC-jacketed 2 m or 9 m (6.5' or 30') 5-wire integral cable Sub-units: PVC-jacketed 2 m or 9 m (6.5' or 30') 2-wire integral cable		
Operating Conditions	Temperature: -10° to +55° C (+14° to 131° F) Storage: -20° to +85° C (-4° to +185° F) Relative Humidity: 90% @ 55° C (non-condensing)			
Certifications	Certifications CE (CE approval is pending for PowerBUS models)			

Performance Curves

Red Beam Models

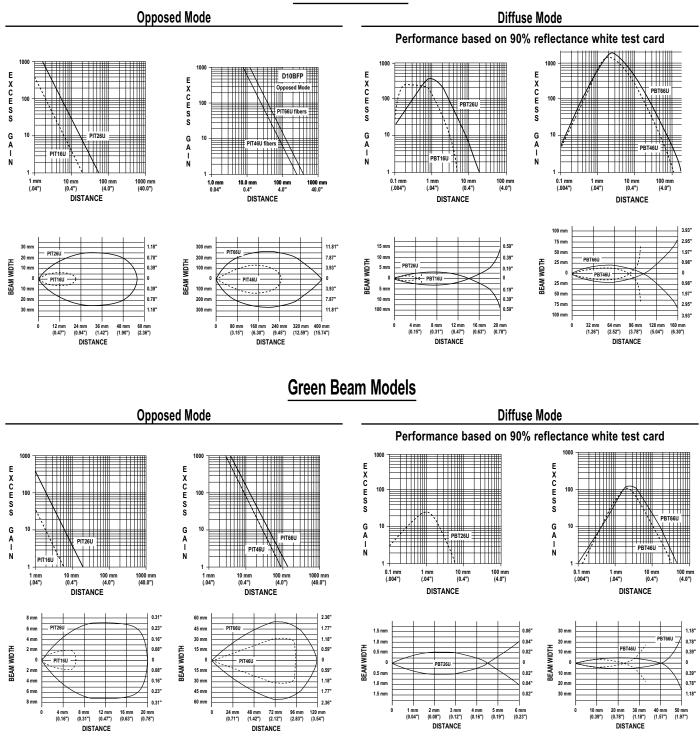

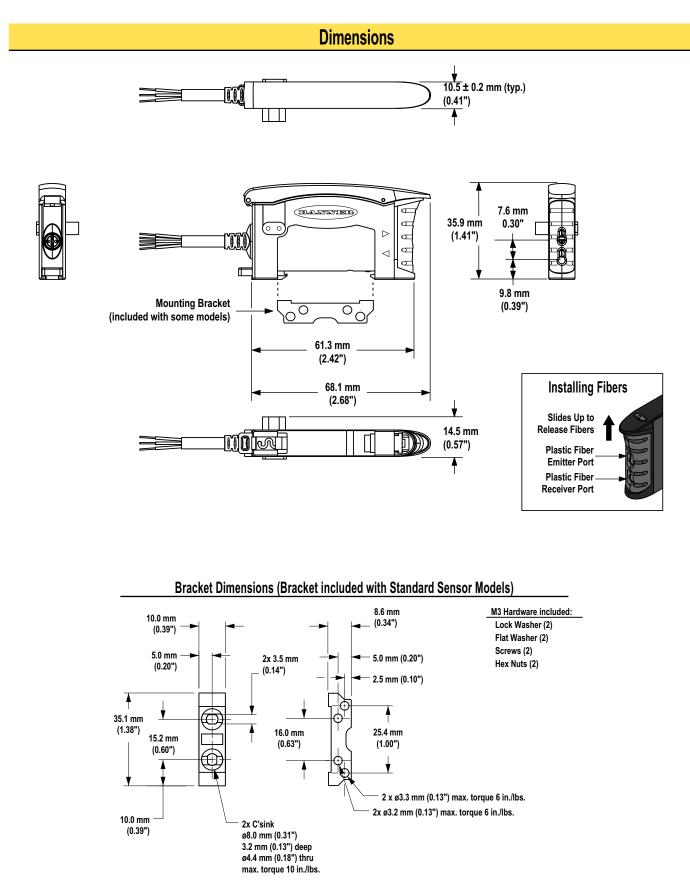


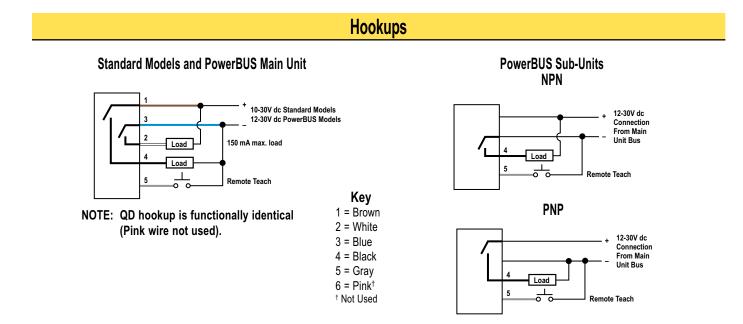

Quick-Disconnect Cordsets

Style	Model	Length	Dimensions	Pinout
6-pin Pico-style straight	PKG6Z-2 PKG6Z-9	2 m (6.5') 9 m (30')	ø 10 mm max. (0.4") 28 mm max. (1.1")	
6-pin Pico-style right-angle	PKW6Z-2 PKW6Z-9	2 m (6.5') 9 m (30')	25 mm max. (1.0") 20 mm (0.8") <u>\$\$12 mm max.</u> (0.5")	

Accessories

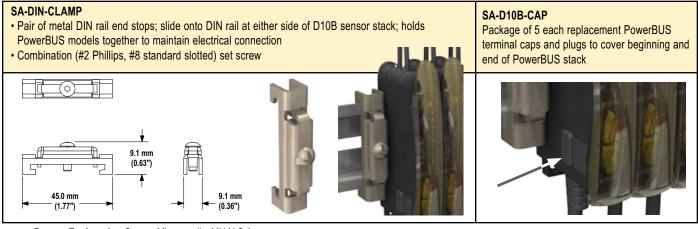

Banner Engineering Corp. • Minneapolis, MN U.S.A www.bannerengineering.com • Tel: 763.544.3164

P/N 117830 rev. C 11

For Sales and Support, Contact Walker EMD • Toll-tree: (800) 876-4444 • Tel: (203) 426-7700 • Fax: (203) 426-7800 • www.walkeremd.com



more sensors, more solutions

P/N 117830 rev. C

WARRANTY: Banner Engineering Corp. warrants its products to be free from defects for one year. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture found to be defective at the time it is returned to the factory during the warranty period. This warranty does not cover damage or liability for the improper application of Banner products. This warranty is in lieu of any other warranty either expressed or implied.

Banner Engineering Corp., 9714 Tenth Ave. No., Minneapolis, MN USA 55441 • Phone: 763.544.3164 • www.bannerengineering.com • Email: sensors@bannerengineering.com

For Sales and Support, Contact Walker EMD • Toll-free: (800) 876-4444 • Tel: (203) 426-7700 • Fax: (203) 426-7800 • www.walkeremd.com