

# SureCross Gateway Module for Wireless Q45 Sensors



Configurable Gateway radio module with discrete inputs, discrete outputs, and DIP switches that automatically map inputs from up to four Nodes or two Wireless Q45 Sensors to the Gateway's outputs



SureCross® embeddable board radio modules were specifically designed for the needs of industrial users to provide connectivity where traditional wired connections are not possible or cost prohibitive. Wireless networks are formed around a Gateway, which acts as the wireless network master device, and one or more Nodes. SureCross embeddable board radio modules communicate with all SureCross radios.

- Wireless industrial I/O device with two sourcing discrete inputs and two sourcing discrete outputs
- 10 to 30V dc power input
- DIP switches allow the user to select one of eight defined I/O mapping configurations to automatically map the Nodes' inputs to this Gateway's outputs
- Site Survey analyzes the network's signal strength and reliability and conveys the results using the two-color LED
- Frequency Hopping Spread Spectrum (FHSS) technology and Time Division Multiple Access (TDMA) control architecture combine to ensure reliable data delivery within the unlicensed Industrial, Scientific, and Medical (ISM) band
- Transceivers provide bidirectional communication between the Gateway and Node, including fully acknowledged data transmission
- Lost RF links are detected and relevant outputs set to user-defined conditions

For additional information, the most recent version of all documentation, and a complete list of accessories, refer to Banner Engineering's website, [www.bannerengineering.com/surecross](http://www.bannerengineering.com/surecross).

## Models

Model	Frequency	Inputs and Outputs
DX80G2M6-B2Q	2.4 GHz ISM Band	<b>Inputs:</b> Two sourcing discrete <b>Outputs:</b> Two sourcing discrete



### WARNING: Not To Be Used for Personnel Protection

**Never use this product as a sensing device for personnel protection. Doing so could lead to serious injury or death.** This product does NOT include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.



### CAUTION: Electrostatic Discharge (ESD)


**ESD Sensitive Device.** Use proper handling procedures to prevent ESD damage to these devices. The module does not contain any specific ESD protection beyond the structures contained in its integrated circuits. Proper handling procedures should include leaving devices in their anti-static packaging until ready for use; wearing anti-static wrist straps; and assembling units on a grounded, static-dissipative surface.



## The SureCross® Wireless Q45 Sensor Network

The SureCross® DX80 wireless I/O network provides reliable monitoring without the burden of wiring or conduit installation. The SureCross wireless network can operate independently or in conjunction with a Modbus host system, PLC, and/or PC software. The SureCross DX80 network is a deterministic system—the network identifies when the radio signal is lost and drives relevant outputs to user-defined conditions. Once the radio signal is reacquired, the network returns to normal operation.

Each wireless network system consists of one Gateway and one or more Wireless Q45 Sensors.

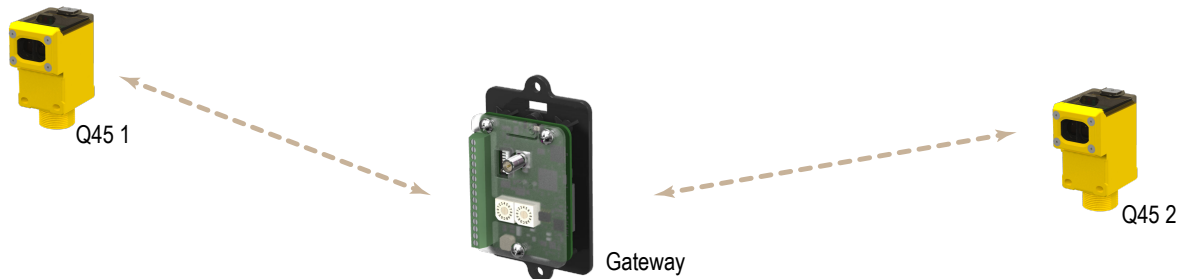

A Gateway acts as the master device within each radio network, initiates communication and reporting with the Nodes, and controls the timing for the entire network. The Gateway also holds the configuration for the network. Every wireless network must have one Gateway that schedules communication traffic and controls the I/O configuration for the network. A radio network contains only one Gateway, but may contain many Wireless Q45 Sensors. Similar to how a gateway device on a wired network acts as a “portal” between networks, the SureCross Gateway acts as the portal between the wireless network and the host controller.

The Gateway's Modbus RTU RS-485 connection allows up to 47 Nodes in a single wireless network when the Gateway is used as a Modbus slave to a Modbus RTU host controller. When used as a Modbus slave device, the Gateway holds the Modbus registers of all wireless devices within the network.


The Wireless Q45 Sensors are wireless network end-point devices used to provide sensing capability in a remote area or factory. The Wireless Q45 Sensors collect data and communicate the data back to the Gateway.

## Setting Up and Installing a Wireless Q45 Sensor Network

To set up and install your Gateway and Wireless Q45 Sensor network, follow these steps.

1. Configure the Gateway and Wireless Q45 Sensor I/O Mapping
2. Wire the Gateway's I/O
3. Apply power to the Gateway
4. Bind the Wireless Q45 Sensors to the Gateway
5. Verify the devices are communicating to each other
6. Conduct a Site Survey between the Gateway and the Wireless Q45 Sensors
7. Install your Wireless Q45 Sensor Network

### DIP Switch Changes

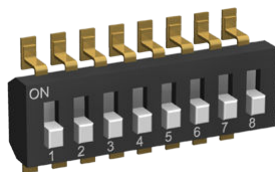

Before making any changes to the DIP switch positions, disconnect the power. For devices with batteries integrated into the housing, remove the battery for at least one minute.

DIP switch changes will not be recognized if power isn't cycled to the device.

### DIP Switch Settings

#### Transmit Power

The 900 MHz radios can be operated at 1 watt (30 dBm) or 250 mW (24 dBm). While the radios operate in 1 Watt mode, they cannot communicate with 150 mW DX80 radio devices. To communicate with the 150 mW radio models, operate this radio in 250 mW mode. For 2.4 GHz radios, this DIP switch is disabled. The transmit power for 2.4 GHz is fixed at about 100 mW EIRP (18 dBm), making the 2.4 GHz Performance models automatically compatible with the DX80 2.4 GHz models.

DIP Switch	
<b>1</b>	<b>Transmit Power Level</b>
OFF *	1 Watt (30 dBm, 900 MHz models only)
ON	250 mW (24 dBm, 900 MHz models only), DX80 compatibility mode

**Host Configured**

Selecting "Host configured" allows a host system to set parameters. By default, this Gateway uses the DIP switches to configure the device.

DIP Switch	
<b>2</b>	<b>Host Configured or Use DIP Switches</b>
OFF *	Use DIP Switches
ON	Host configured (DIP switches 3-8 are ignored)

**Output State During a Radio Link Loss**

The SureCross DX80 wireless devices use a deterministic radio link time-out method to address RF link interruption or failure. When a radio link fails, all pertinent wired outputs are sent to defined states until the link is recovered, ensuring that disruptions in the communications link result in predictable system behavior.

Select the state the outputs are changed to during a link loss.

DIP Switches		
3	4	Output State During a Radio Link Loss
OFF *	OFF *	Off (discrete) or 0 mA (analog)
ON	OFF	On (discrete) or 20 mA (analog)
OFF	ON	Hold last stable state
ON	ON	Reserved

\* Default configuration

**Heartbeat**


In heartbeat mode, the Nodes send "heartbeat" messages to the Gateway at specific intervals to indicate the radio link is active. The heartbeat is always initiated by the Node and is used only to verify radio communications.

DIP Switch	
<b>5</b>	<b>Heartbeat Settings</b>
OFF *	30 seconds (30 to 60 second link loss timeout)
ON	5 seconds (5 to 10 second link loss timeout)

\* Default configuration

**I/O and Link Loss Alarm Mapping for Wireless Q45 Sensors**


The link loss alarm is set to zero (0) when the radio link is working and set to one (1) when the radio link is lost.

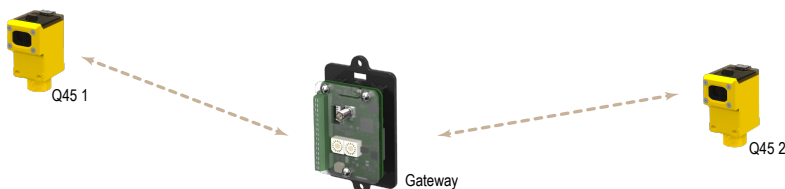

DIP Switches			
6	7	8	I/O Mapping
OFF *	OFF *	OFF *	Q45 01, input 1 → Gateway Discrete OUT 1 Q45 02, input 1 → Gateway Discrete OUT 2
OFF	ON	OFF	Q45 01, input 1 → Gateway Discrete OUT 1 Q45 01 link loss alarm → Gateway Discrete OUT 2
ON	OFF	OFF	Q45 01, input 1 → Gateway Discrete OUT 1 Q45 01, input 2 → Gateway Discrete OUT 2

\* Default configuration. To use up to 47 Nodes or Wireless Q45 Sensors with this Gateway, you must use a Modbus host controller system. For more information about using a host controller system, refer to the *Host Configuration* manual, Banner document part number 132114.

**I/O Mapping for one DX80N2X6S-PB2 Node and a DX80G2M6S-B2Q Gateway**

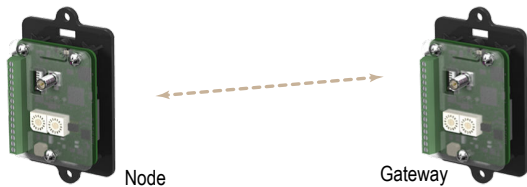

DIP Switches			
6	7	8	I/O Mapping Between a DX80N2X6S-PB2 and a DX80G2M6S-B2Q Gateway
ON	OFF	ON	Node 01 Discrete IN 1 → Gateway Discrete OUT 1 Node 01 Discrete IN 2 → Gateway Discrete OUT 2 Node 01 Analog IN 1 → Gateway Analog OUT 1 Node 01 Analog IN 2 → Gateway Analog OUT 2 Gateway Discrete IN 1 → Node 01 Discrete OUT 1 Gateway Discrete IN 2 → Node 01 Discrete OUT 2 Gateway Analog IN 1 → Node 01 Analog OUT 1 Gateway Analog IN 2 → Node 01 Analog OUT 2

**I/O Mapping for two DX80N2X6S-PB2 Nodes and a DX80G2M6S-B2Q Gateway**



DIP Switches			
6	7	8	I/O Mapping Between a DX80N2X6S-PB2 and a DX80G2M6S-B2Q Gateway
ON	ON	OFF	Node 01 Discrete IN 1 → Gateway Discrete OUT 1 Node 02 Discrete IN 1 → Gateway Discrete OUT 2 Node 01 Analog IN 1 → Gateway Analog OUT 1

DIP Switches			
6	7	8	I/O Mapping Between a DX80N2X6S-PB2 and a DX80G2M6S-B2Q Gateway
			Node 02 Analog IN 1 → Gateway Analog OUT 2 Gateway Discrete IN 1 → Node 01 Discrete OUT 1 Gateway Discrete IN 2 → Node 02 Discrete OUT 1 Gateway Analog IN 1 → Node 01 Analog OUT 1 Gateway Analog IN 2 → Node 02 Analog OUT 1

**Wire the Gateway's I/O and Apply Power**


The diagram shows a physical layout of the gateway module with the following components and dimensions:

- Dimensions: 45.72 [1.8"] (width), 30.48 [1.2"] (width of top section), 53.34 [2.1"] (height of main section), 60.96 [2.4"] (total height).
- Components: Hole for #6 screw (3), Binding button, Antenna connection, DIP switches, LED, Tens unit, Ones unit, Rotary dials.

Pin	Description	Label
1		
2		
3	Discrete IN 1 (PNP)	DI1
4	Discrete IN 2 (PNP)	DI2
5	Ground	GND
6	Discrete OUT 1 (PNP)	DO1
7	Discrete OUT 2 (PNP)	DO2
8		
9		
10	RS-485 + Host communication connection	485+
11	RS-485 - Host communication connection	485-
12	Ground	GND
13	10 to 30V dc	PWR
14	Ground	GND

The three ground connections are tied together internally.

**Input and Output Wiring**

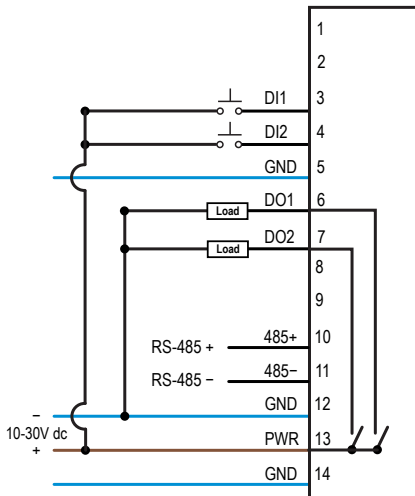

## Modbus Register Table

I/O #	Modbus Holding Register		I/O Type	I/O Range		Holding Register Representation	
	Gateway	Any Node		Min. Value	Max. Value	Min. (Dec.)	Max. (Dec.)
1	1	1 + (Node# × 16)	Discrete IN 1	0	1	0	1
2	2	2 + (Node# × 16)	Discrete IN 2	0	1	0	1
		...					
7	7	7 + (Node# × 16)	Reserved				
8	8	8 + (Node# × 16)	Device Message				
9	9	9 + (Node# × 16)	Discrete OUT 1	0	1	0	1
10	10	10 + (Node# × 16)	Discrete OUT 2	0	1	0	1
		...					
15	15	15 + (Node# × 16)	Control Message				
16	16	16 + (Node# × 16)	Reserved				

### Bind the Q45s to the Gateway and Assign the Node Address

Binding Wireless Q45 Sensors to their Gateway ensures the Q45s only exchange data with the Gateway they are bound to.

Before beginning the binding procedure, apply power to all the devices.

After the Gateway enters binding mode, the Gateway generates and transmits a unique extended addressing, or binding, code to all Wireless Q45 Sensors within range that are also in binding mode. The extended addressing (binding) code defines the network, and all radios within a network must use the same code.

For Gateways with LCDs, after binding your Wireless Q45 Sensors to the Gateway, make note of the binding code displayed under the Gateway's \*DVCFG menu, XADR submenu on the LCD. Knowing the binding code prevents having to re-bind all Q45s if your Gateway is ever replaced.

To create your network, bind the Wireless Q45 Sensors to the Gateway and assign them a Node address using the Gateway's rotary dials. Valid Node addresses are 01 through 47. The following instructions are specific to binding Wireless Q45 Sensors to a Gateway.

1. Enter binding mode on the Gateway.

#### Model

**-B2Q Board Modules**

**-Q and -QC Gateway Radios**

#### To Enter Binding Mode:

Triple click the button.

Triple click button 2.

On the board modules, the green and red LED flashes. On the -Q and -QC Gateway models, both LEDs flash red.

2. Assign the Q45 a Node address using the Gateway's rotary dials. Use the left rotary dial for the left digit and the right rotary dial for the right digit. For example, to assign your Q45 to Node 01, set the left dial to 0 and the right dial to 1.
3. Loosen the clamp plate on the top of the Wireless Q45 Sensor and lift the cover.
4. Enter binding mode on the Wireless Q45 Sensor by triple-clicking the button.  
The red and green LEDs flash alternately and the sensor searches for a Gateway in binding mode. After the Q45 is bound, the LEDs stay solid momentarily, then they flash together four times. The Q45 exits binding mode.
5. Label the sensor with the Q45's Node address number and place the sticker on the Wireless Q45 Sensor.
6. Repeat steps 3 through 5 for as many Wireless Q45 Sensors as are needed for your network.
7. After binding all Wireless Q45 Sensors, exit binding mode on the Gateway.






**Model****-B2Q Board Modules****-Q and -QC Gateway Radios****To Exit Binding Mode:**

Double click the button.

Double click button 2.

**LED Behavior for the Gateways**

After powering up and binding the Gateway and its Nodes, verify all devices are communicating properly. When testing communication between the Gateway and Node, verify all radios and antennas are at least two meters apart or the communications may fail. This table lists the LED behavior for the board-model Gateways with one LED.

LED (Bi-color)	Gateway Status
 (green on)	Power ON
 (green and red flashing alternately)	Binding mode
 (red flashing)	Device Error
 (green and red flashing together, looks yellow-orange)	Modbus Communication Active
 (red flashing)	Modbus Communication Error

For Gateway and Ethernet Bridge systems, active Modbus communication refers to the communication between the Gateway and the Ethernet Bridge. For Gateway-only systems, the Modbus communication LEDs refer to the communication between the Gateway and its host system (if applicable).

**Conduct a Site Survey from a Gateway Board Model**

Conducting a Site Survey, also known as an RSSI (Radio Signal Strength Indication), analyzes the radio communications link between the Gateway and any Node within the network by analyzing the radio signal strength of received data packets and reporting the number of missed packets that required a retry.

Perform a Site Survey before permanently installing the radio network to ensure reliable communication. Only the Gateway can initiate a Site Survey, and the Site Survey analyzes the radio communications link with one Node at a time. Follow these steps to conduct a Site Survey from the board module Gateway.

- To start the Site Survey, set the Gateway's rotary dials to the Node address you'd like to conduct a Site Survey with. For example, to analyze the signal strength between this Gateway and Node 02, rotate the left rotary dial to 0 and the right rotary dial to 2. The Site Survey automatically begins running. If there is a device at address 02, the LED flashes yellow. If there is no device at address 02, the LED is solid red. The yellow LED flashes at varying rates to indicate the signal strength.
- To exit the Site Survey, set the Gateway's rotary dials to 00. Otherwise, after 15 minutes the Gateway automatically exits Site Survey mode. The LED flashes green to indicate the Gateway is in standard operating mode.

The yellow LED flashes at specific rates to indicate the Site Survey results. Each signal strength represents the majority of the data packets being received at that signal strength. For example, a strong signal strength indicates the majority of the data packets were received at a strong signal, but a few many have been received at a good or weak signal strength.

- Eight flashes per second: Very strong signal strength
- Four flashes per second: Strong signal strength
- Two flashes per second: Good signal strength
- One flash per second: Weak signal strength
- Solid yellow LED: No radio communication detected

## Specifications

### Radio

#### Range

2.4 GHz: Up to 3.2 kilometers (2 miles) \*

#### Transmit Power

2.4 GHz: 18 dBm conducted, less than or equal to 20 dBm EIRP

#### 2.4 GHz Compliance

FCC ID UE300DX80-2400 - This device complies with FCC Part 15, Subpart C, 15.247

ETSI/EN: In accordance with EN 300 328: V1.7.1 (2006-05)

IC: 7044A-DX8024

#### Spread Spectrum Technology

FHSS (Frequency Hopping Spread Spectrum)

#### Antenna Connection

Ext. Reverse Polarity SMA, 50 Ohms

Max Tightening Torque: 0.45 N·m (4 in·lbf)

\* With the 2 dB antenna that ships with the product. High-gain antennas are available, but the range depends on the environment and line of sight. To determine the range of your wireless network, perform a Site Survey.

### General

#### Power\*

Requirements: +10 to 30V dc (For European applications: +10 to 24V dc,  $\pm 10\%$ ). (See UL section below for any applicable UL specifications)

\* For European applications, power the DX80 from a Limited Power Source as defined in EN 60950-1.

#### Interface

Indicators: One bi-color LED

Buttons: One

#### Wiring Access

Terminal block

### Inputs and Outputs

#### Discrete Input

Two, sourcing

Rating: 3 mA max current at 30V dc

Sample Rate: 62.5 milliseconds

Report Rate: On change of state

ON Condition (PNP): Greater than 8V

OFF Condition (PNP): Less than 5V

#### Discrete Output

Two, sourcing

Update Rate: 1 second

ON Condition (PNP): Supply minus 2V

OFF Condition (PNP): Less than 2V

Output State Following Timeout: De-energized (OFF)

#### Discrete Output Rating (PNP)

100 mA max current at 30V dc

ON-State Saturation: Less than 3V at 100 mA

OFF-state Leakage: Less than 10  $\mu$ A

### Communication

#### Hardware (RS-485)

Interface: 2-wire half-duplex RS-485

Baud Rates: 9.6k, 19.2k (default), or 38.4k

Data Format: 8 data bits, no parity, 1 stop bit

### Environmental

#### Environmental

Operating Temperature:  $-40$  to  $+85^\circ$  C

Operating Humidity: 95% max. relative (non-condensing)

#### Radiated Immunity

10 V/m, 80-2700 MHz (EN61000-6-2)



Refer to the SureCross® DX80 Wireless I/O Network product manual, Banner p/n 132607, for installation and waterproofing instructions. Operating the devices at the maximum operating conditions for extended periods can shorten the life of the device.



## Accessories for the Board Models


### Enclosures

These accessories are used with the M-HBx MultiHop radio devices.

	Model No.	Description
	BWA-HW-033	Plastic housing pack, with DIN rail mount, base, and mounting screws (also ships with the HBx models)
	BWA-HW-034	DIN Rail Mount, Plastic

### MultiHop M-HBx and Performance PBx Models Mounted on the Base

Most MultiHop M-HBx and Performance PBx models ship from the factory mounted on a plastic base.

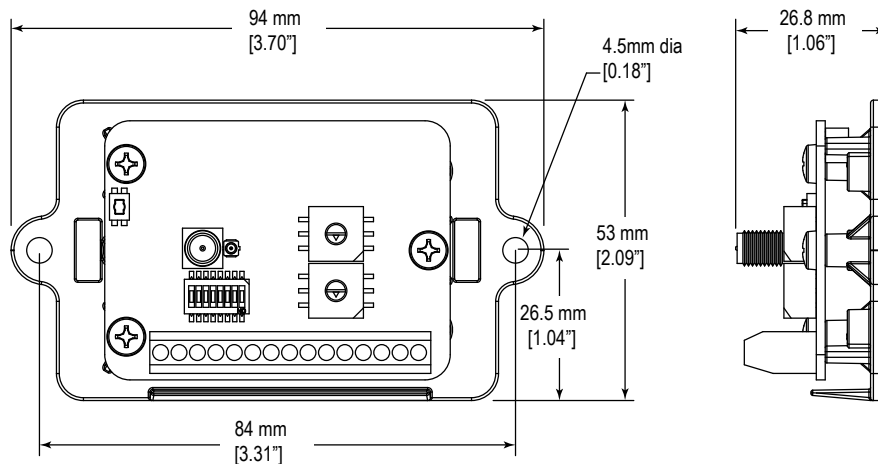

### Warnings

The manufacturer does not take responsibility for the violation of any warning listed in this document.

**Make no modifications to this product.** Any modifications to this product not expressly approved by Banner Engineering could void the user's authority to operate the product. Contact the Factory for more information.

**All specifications published in this document are subject to change.** Banner reserves the right to modify the specifications of products without notice. Banner Engineering reserves the right to update or change documentation at any time. For the most recent version of any documentation, refer to our website: [www.bannerengineering.com](http://www.bannerengineering.com). © 2006-2010 Banner Engineering Corp. All rights reserved.

### Antenna Installation

Always install and properly ground a qualified surge suppressor when installing a remote antenna system. Remote antenna configurations installed without surge suppressors invalidate the manufacturer's warranty.

Always keep the ground wire as short as possible and make all ground connections to a single-point ground system to ensure no ground loops are created. No surge suppressor can absorb all lightning strikes. Do not touch the SureCross™ device or any equipment connected to the SureCross device during a thunderstorm.

### Exporting SureCross Radios

It is our intent to fully comply with all national and regional regulations regarding radio frequency emissions. **Customers who want to re-export this product to a country other than that to which it was sold must ensure the device is approved in the destination**

**country.** A list of approved countries appears in the *Agency Certifications* section of the product manual. The SureCross wireless products were certified for use in these countries using the antenna that ships with the product. When using other antennas, verify you are not exceeding the transmit power levels allowed by local governing agencies. Consult with Banner Engineering if the destination country is not on this list.

### **Banner Engineering Corp Limited Warranty**

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.