


M16 versafast® Cordset Part Number Key


Part Number Keys are to assist in IDENTIFICATION ONLY. Consult factory for catalog items not identified.

<div>B</div> <div>S</div> <div>M</div> <div></div>		<div>12</div> <div>-</div> <div>999</div> <div>-</div> <div>*</div> <div>/S..</div>	<div>Varieties</div> <div>(blank) = PVC jacket</div> <div>/S90 = PUR jacket</div> <div>/S101 = TPE jacket</div> <div>Length in Meters</div>
<div>M16 versafast Cordset</div>			
<div>Gender</div> <div>K = female connector</div> <div>S = male connector</div>			
<div>Configuration</div> <div>(blank) = assembled connector</div> <div>M = straight molded</div> <div>WM = right angle molded</div>			
<div>Housing Material</div> <div>(blank) = nickel plated brass</div> <div>K = nylon</div> <div>V = 316 stainless steel</div>			
<div>Insertion Point of Extension Cable 2nd Prefix*</div> <div>* Male connector listed 1st, female connector 2nd</div> <div>Example: BSM BKM 12-001-1</div>			
<div>Number of Pins</div> <div>5 = 5</div> <div>6 = 6</div> <div>7 = 7</div> <div>8 = 8</div> <div>12 = 12</div> <div>14 = 14</div> <div>19 = 19</div>			<div>Number of Wires / AWG / Color Codes</div> <div>5-Pin</div> <div>084 = 5x18 AWG BN, BU, WH, BU, BK, GY</div> <div>6-Pin</div> <div>085 = 6x18 AWG BN, BU, WH, BU, BK, GY, PK</div> <div>7-Pin</div> <div>086 = 7x18 AWG WH, BN, GN, YE, GY, PK, BU</div> <div>8-Pin</div> <div>087 = 8x18 AWG WH, BN, GN, YE, GY, PK, BU, RD</div> <div>12-Pin</div> <div>001 = 12x22 AWG BN, BU, WH, GN, YE, GY, PK, RD, BK, OG, TN, VT / PUR jacket</div> <div>967 = 12x22 AWG (same color code as 001) / PVC jacket</div> <div>999 = 12x22 AWG (same color code as 001) / TPE jacket</div> <div>14-Pin</div> <div>000 = 14x22 AWG BN, RD/BU, BK, PK, GN, BU, OG, GY/BN, VT, WH, RD, GY, YE, TN / TPE jacket</div> <div>002 = 14x22 AWG (same color code as 000) / PUR jacket</div> <div>755 = 12x24 AWG OG, BK, GN, GY, BN, TN, VT, RD, WH, YE, PK, BU / PVC jacket</div> <div>836 = 10x24 AWG GY, GN, BK, BN, PK, YE, WH, RD, VT, BU / PVC jacket</div> <div>917 = 12x24 AWG RD/BU, GY, GN, BK, GY/PK, BN, PK, YE, WH, RD, VT, BU / PVC jacket</div> <div>954 = 10x24 AWG (same color code as 836) / TPE jacket</div> <div>998 = 14x22 AWG (same color code as 000) / PVC jacket</div> <div>19-Pin</div> <div>995 = 19x22 AWG BU, GY/PK, RD/BU, WH/GN, BK, BN/GN, PK, WH/YE, GN, YE/BN, BU, OG, GY/BN, VT, WH, RD, GY, YE, TN / PVC jacket</div> <div>996 = 19x22 AWG (same color code as 995) / PUR jacket</div> <div>997 = 19x22 AWG (same color code as 995) / TPE jacket</div>


Extension Examples:



B S M B K M 12 - 999 - * /S..

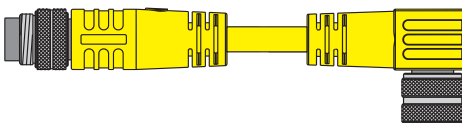

B S M B K W M 12 - 999 - * /S..

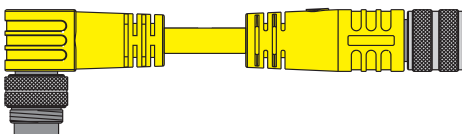

B S W M B K M 12 - 999 - * /S..